


## **EXHIBIT 8**

Ser. No.: 10/005,728

42390P5943C

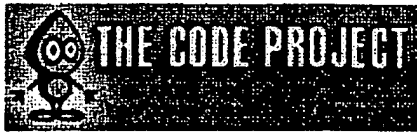

The Intellisense upgrade for Visual Studio .NET - make your IDE as smart as you.

All Topics, MFC / C++ >> System >> General

## Get the Processor Speed in two simple ways

By Thomas Latuske

C++ (VC6)  
Windows (NT4, WinXP)  
Win32, VS, MFC [Help!](#)  
Dev  
Posted 8 Jun 2004  
Updated 13 Jun 2004  
 Articles by this author  
7,845 views

Get the frequency of the processor either from the registry, or calculate it.

Search:  [Articles](#)

[Help!](#) [Articles](#) [Message Boards](#) [StoreFront](#) [Lounge](#)

25 members have rated this article. Result:

Popularity: 6.5. Rating: 4.65

### Toolbox

Broken Article?

VS.NET 2003 for \$899

MSDN Univ. from \$1950

Print version

Send to a friend

Sign in / Sign up

Email


Password

☒ Remember me

[Join](#) [Sign in](#)

[Lost your Password?](#)

- Download demo project - 20.8 Kb

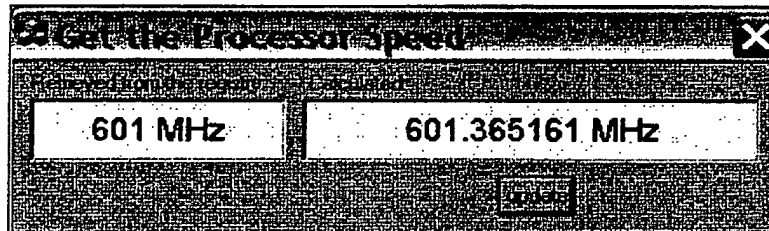

### Introduction

I'll show you two ways to retrieve the processor-speed (**frequency in MHz**). W simple functions, one to retrieve the frequency from the registry of your Windo operating system, and one to calculate it with the clock cycles and a high resolu counter. If you want to use the function to calculate the speed (**frequency**), yc to use it with a Pentium instruction set compatible processor (look at the lines l

rfmobile wrote in a message:

*You don't need to change the RDTSC definition for non-Intel processors. The code works as-is on my AMD mobile Athlon. Should work on any Pentium Instruction set compatible processor but not for 486 or 386.*

I'm not able to verify this, so I would like to hear some feedback.

BTW: **Constructive** criticism is always welcome! :-)

file://C:\Work\Patents\Applications%20Pending\P5943C\Declaration%201.132%20evide... 10/11/2004

## Routine to retrieve the speed (frequency) from the reg

This is plain code to retrieve a registry value as a CString:

```
CString ProcSpeedRead()
{
    CString sMHz;
    char Buffer[_MAX_PATH];
    DWORD BufSize = _MAX_PATH;
    DWORD dwMHz = _MAX_PATH;
    HKEY hKey;

    // open the key where the proc speed is hidden:
    long lError = RegOpenKeyEx(HKEY_LOCAL_MACHINE,
        "HARDWARE\\DESCRIPTION\\System\\CentralProcessor\\",
        0,
        KEY_READ,
        &hKey);

    if(lError != ERROR_SUCCESS)
    {
        // if the key is not found, tell the user why:
        FormatMessage(FORMAT_MESSAGE_FROM_SYSTEM,
            NULL,
            lError,
            0,
            Buffer,
            _MAX_PATH,
            0);
        AfxMessageBox(Buffer);
        return "N/A";
    }

    // query the key:
    RegQueryValueEx(hKey, "-MHz", NULL, NULL, (LPBYTE) &dwMHz, &BufSi

    // convert the DWORD to a CString:
    sMHz.Format("%i", dwMHz);

    return sMHz;
}
```

## Routine to calculate the processor frequency in MHz:

Retrieve the frequency in MHz as a floating-point number. I use some well documented (at least for me ;-)) assembler here:

```
float CGettheProcessorSpeedDlg::ProcSpeedCalc()
{
    /*
    RdTSC:
    It's the Pentium instruction "Read Time Stamp Counter". It measures the
    number of clock cycles that have passed since the processor was reset, as
    a 64-bit number. That's what the <CODE>_emit lines do.*/
    #define RdTSC __asm __emit 0x0f __asm __emit 0x31

    // variables for the clock-cycles:
    __int64 cyclesStart = 0, cyclesStop = 0;
    // variables for the High-Res Performance Counter:
    unsigned __int64 nCtr = 0, nFreq = 0, nCtrStop = 0;
```

```

// retrieve performance-counter frequency per second:
if(!QueryPerformanceFrequency((LARGE_INTEGER *) &nFreq)) return 0;

// retrieve the current value of the performance counter:
QueryPerformanceCounter((LARGE_INTEGER *) &nCtrStop);

// add the frequency to the counter-value:
nCtrStop += nFreq;

_asm
{
    // retrieve the clock-cycles for the start value:
    Rdtsc
    mov DWORD PTR cyclesStart, eax
    mov DWORD PTR [cyclesStart + 4], edx
}

do{
    // retrieve the value of the performance counter
    // until 1 sec has gone by:
    QueryPerformanceCounter((LARGE_INTEGER *) &nCtr);
}while (nCtr < nCtrStop);

_asm
{
    // retrieve again the clock-cycles after 1 sec. has gone by:
    Rdtsc
    mov DWORD PTR cyclesStop, eax
    mov DWORD PTR [cyclesStop + 4], edx
}

// stop-start is speed in Hz divided by 1,000,000 is speed in MHz
return ((float)cyclesStop-(float)cyclesStart) / 1000000;
}

```

## Credits

- I got the assembler some time ago from an assembler newsgroup
- ...and credits to all programmers out there who share their knowing!

## About Thomas Latuske



My name is Thomas, I'm born on January the 11th in 1970, right now I'm working in the Quality department of a big Pipe mill as a Technician. My hobbies are my girl friend, my car, RC-Planes and Computers. I begun with VC++ some time ago and now Programming is like a drug to me (I'm still a beginner). I want to learn it all in a blink of an eye ☹ but i know that this is not possible. It's real fun for me and I do small Programms for my own use. O.K. enough written..... I need my Time to debug everything that crosses my way! ☹

Click here to view **Thomas Latuske's** online profile.

# The Code Project - Get the Processor Speed in two simple ways - System

Page 4 of 5

## Other popular System articles:

- **API hooking revealed**  
The article demonstrates how to build a user mode Win32 API spying system
- **Using MC.exe, message resources and the NT event log in your own projects**  
A tutorial that shows how to integrate mc.exe in the build environment of VisualStudio and use it for event logging and string resources
- **Serial library for C++**  
A high-performance, complete and compact serial library for C++
- **System Dialogs**  
This article shows you a very simple way to show system dialogs like Internet Options, Add/Remove Programs, and etc.

[Top]

Sign in to vote for this article: Poor ○ ○ ○ ○ ○ Excellent

<input checked="" type="checkbox"/> MSDN Magazine - Your guide to Microsoft tools, development	<input checked="" type="checkbox"/> The intellisense upgrade for Visual Studio .NET - make your IDE as smart as you
--	---

Premium Sponsor



FAQ

Noise level Search comments View Per page 

New thread

Msgs 1 to 15 of 15 (Total: 15) (Refresh)

First Prev Next Last

Subject	Author	Date
Why waiting that second?	Anonymous	5:58 29 Jul '04
Accuracy not guaranteed	DavidCrow	14:05 17 Jun '04
The code I'm posting here has always worked for me	Olan Patrick Barnes	15:14 14 Jun '04
Re: The code I'm posting here has always worked for me	Thomas Latuske	16:39 14 Jun '04
Get Processor Speed should be Get Processor Frequency	technomanceraus	1:30 9 Jun '04
Re: Get Processor Speed should be Get Processor Frequency	RichardGrimmer	10:18 9 Jun '04
Re: Get Processor Speed should be Get Processor Frequency	Anonymous	23:21 13 Jun '04
Re: Get Processor Speed should be Get Processor Frequency	Vince C.	4:22 15 Jun '04
RDTSC	rfmobile	21:07 8 Jun '04
Re: RDTSC	Thomas Latuske	12:04 13 Jun '04
Registry method works only on NT	dacrls	15:39 8 Jun '04
Re: Registry method works only on NT	Rick York	16:04 8 Jun '04
Re: Registry method works only on NT	Thomas Latuske	16:43 8 Jun '04
Code will break soon...	DIWa	14:08 8 Jun '04

file://C:\Work\Patents\Applications%20Pending\P5943C\Declaration%201.132%20evide... 10/11/2004

**"The Code Project - Get the Processor Speed in two simple ways - System****Page 5 of 5** **Re: Code will break soon...** **Thomas Latuske****15:04 8 Jun '04****Last Visit: 19:25 Wednesday 6th October, 2004****First Prev Next Last****All Topics, MFC / C++ >> System >> General**  
**Updated: 13 Jun 2004****Article content copyright Thomas Latuske, 2004**  
**everything else Copyright © CodeProject, 1999-2004.**  
**Advertise on The Code Project | Privacy****MSDN Communities | ASPAlliance • Developer Fusion • DevGuru • Programmers Heaven • Planet Source Code • Resource**  
**Index • Tek-Tips Forums • What is XML? • VisualBuilder • ZVON • Search Us!****file://C:\Work\Patents\Applications%20Pending\P5943C\Declaration%201.132%20evid... 10/11/2004**